Re-turn worn shafts and roll journals on-site in hours.


The PL4000 Portable Lathe bolts directly to the end of the work piece and enables the oprator to cut grooves, or re-turn straight and tapered shafts with precision.


Low Profile

Requires only 12.75 inches (323.8 mm) of radial turning clearance so you can work in tight spots.

Powerful and Precise.

- Performs all turning operations along 24.75 inches (628.7 mm) of shaft. Cuts tapers up to 2.5 inches per foot (63.5 mm per 304.8 mm) on diameter.
- Turns shafts from 8.0 24.0 inches (203.2 - 609.6 mm). (This machine works within a 12.0 inch (304.8 mm) diameter space around the shaft, and 24.0 inches (609.6 mm) from the end of the shaft, or 27.0 inches (685.8 mm) with optional extender.)

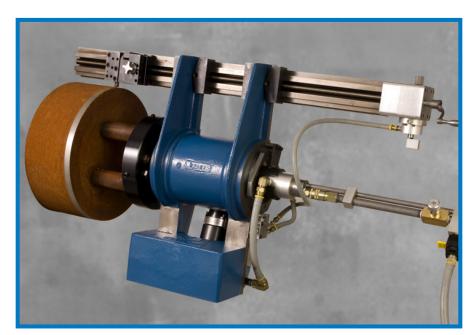

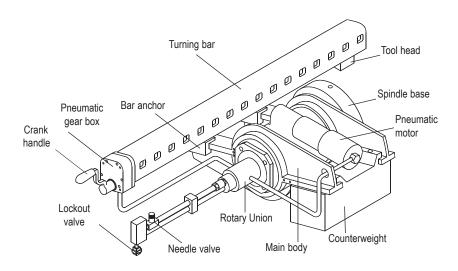





SPECIFICATIONS

O. 2011 107 1110110	US	Metric
Shaft diameter Min. Max. with standard tool holder Max. with optional extender	8.0 inches 18.0 inches 24.0 inches	203.2 mm 457.2 mm 609.6 mm
Cutting reach Min. with standard tool holder Max. with standard tool holder Min. with optional extender Max. with optional extender	0 inches 24.75 inches 3.25 inches 27.0 inches	0 mm 628.7 mm 82.6 mm 685.8 mm
Max taper	2.5 inches/foot on diameter (on 8 - 18 inch diameters)	63.5 mm/304.8 mm on diameter (on 203.2 - 457.2 mm diameters)
Vertical tool travel, total	1.5 inches	38.1 mm
Tool feed, reversible	0 - 0.020 inches/rev	0 - 0.5 mm/rev.
Max. torque at tool head	450 ft-lb	610.1 N·m
Air motor Rotational speed at max. rated Hp Rotational speed at no-load	520 rpm 1100 rpm	520 rpm 1100 rpm
Air consumption at max. rated Hp	90 psi at 48 ft ³ /min	620 kPa at 1.36 m³/min
Machine rotational speed at max. rated Hp at no-load	21 rpm 30 rpm	21 rpm 30 rpm
Cutter, square lathe tool bit	½ inch	12.7 mm
Operating weight	413 lbs	187.3 kg
Shipping weight	550 lbs	249.5 kg
Shipping dimensions	53 X 38 X 19 inches	1346.2 x 965.2 x 482.6 mm

SET-UP


The Portable Lathe mounts to the shaft via a mounting plate which is drilled and counterbored to match the shaft. The lathe spindle then mounts to the plate on four studs. The turning bar mounts to arms on the main body and can be easily adjusted for reach and turning radius.

Parallelism between the bar and the spindle is set by adjusting two tool arm anchors until they measure equidistant from measuring flats on the main body. Parallelism with the work piece is set using jacking screws. Set screws provide centering.

Typical set-up time is 30 minutes (once the mounting plate is prepared).



A simple cam and valve arrangement activates the pneumatic tool feed mechanism.

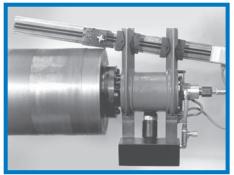


The turning bar may be set at an angle for cutting tapers up to 2.5 inches/foot (63.5 mm/304.8 mm) on diameter.


All dimensions should be considered reference. Contact your Climax Representative for precision dimensions. Specifications are subject to change without notice. There are no systems or components on this machine that are capable of producing hazardous EMC, UV or other radiation hazards. The machine does not use lasers nor does it create hazardous materials such as gasses or dust.



Dimensions in Inch (mm)

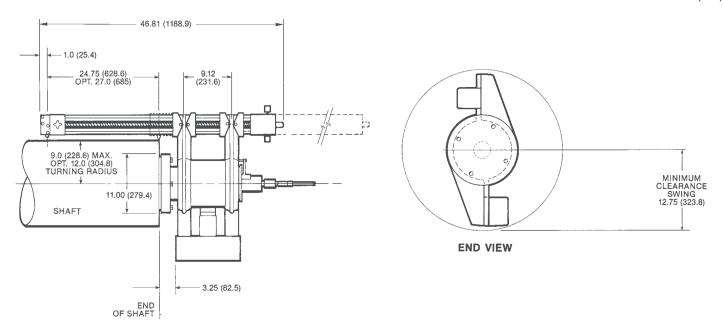

COMPONENTS AND ACCESSORIES

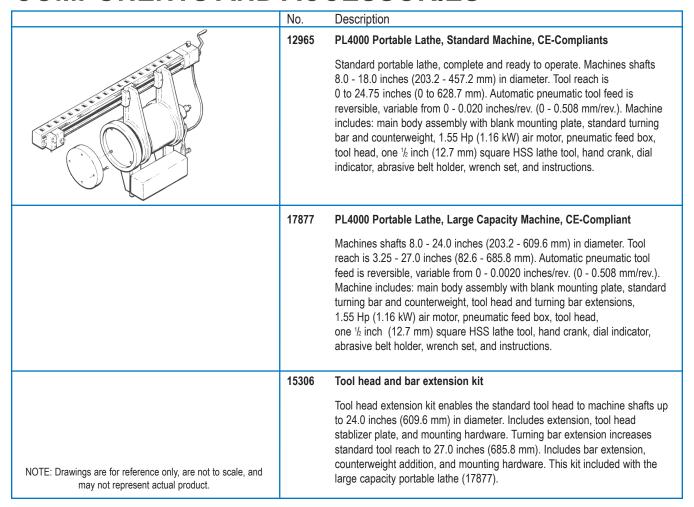

OEM OPERATIONAL TRAINING

Backed by Over 50 Years of Experience

CLIMAX pioneered the concept of portable machine tools in 1964. Since that time, CLIMAX has grown to become the world's largest provider of innovative on-site machining solutions.

Professional, Experienced Instructors

All training programs are taught by experienced OEM CLIMAX trainers. Your instructor will provide valuable information on operator safety, tool set-up, mounting, and operation that will help you complete your on-site machining tasks quickly and to the highest quality standards.

Sign up today for training at one of our seven Global CLIMAX training centers.

- · Portland, Oregon
- · Houston, Texas
- Baton Rouge, Louisiana
- · Cleveland, Ohio
- Manchester, United Kingdom
- · Düren, Germany
- · Dubai, United Arab Emirates



Call CLIMAX for:

RENTALS

On selected models. With 20+ worldwide rental depot locations, you are never far away from CLIMAX.

OEM TRAINING


If you need training or on-site consultation, we're famous for it!

SPARES, REPAIR & MAINTENANCE

Call us for anything you need to keep your system running in top condition.

CUSTOM PROJECTS

Custom turn-key system design services from the most experienced engineers in the business!

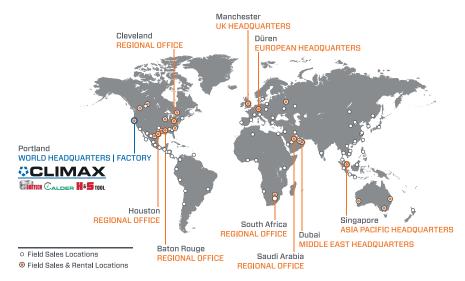

Follow us on:







World Headquarters

Address: 2712 E. 2nd St, Newberg, Oregon 97132

Tel: +1 503 538 2185 Fax: +1 503 538 7600 Email: info@cpmt.com

Asia Pacific

Address: 10, Raeburn Park, #02-08, Singapore

088702

Tel: +65 6801 0662 Fax: +65 6801 0699

Email: ClimaxAsia@cpmt.com

European

Address: Am Langen Graben 8, 52353 Düren,

Germany

Tel: (+49) (0) 2421 9177 0 Fax: (+49) (0) 2421 9177 29 Email: ClimaxEurope@cpmt.com

Middle East

Address: C9, Phase 5, Light Industrial Units, DSO,

Dubai, UAE

Tel: +971 4 321 0328

Email: ClimaxUAE@cpmt.com

United Kingdom

Address: Unit 7 Castlehill Industrial Estate, Bredbury Industrial Park, Horsfield Way, Stockport SK6 2SU

Tel: +44 (0) 161 406 1720 Email: ClimaxUK@cpmt.com

