
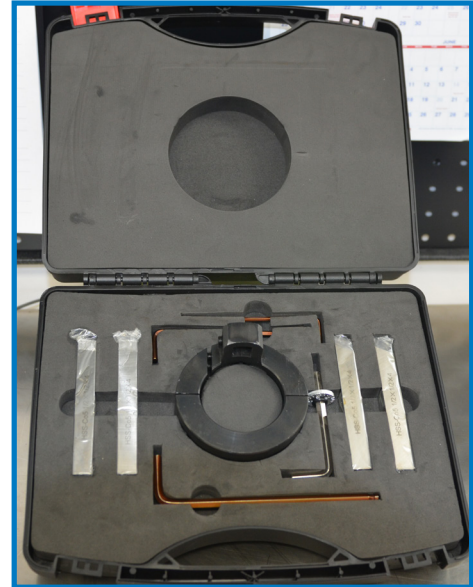


## FAST. EASY. ACCURATE.

With the Micro-Adjust Boring Head, the operator can simply turn a dial to select the radius desired and then you are ready to go.

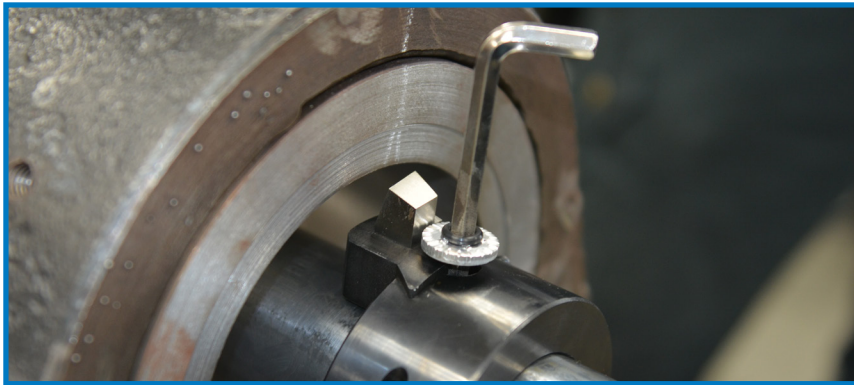

### FEATURES

- Fits 2.25-inch (57.15 mm) diameter bars with 1/2-inch (12.7 mm) square thru-hole tool slots and can be used on bars without slots
- Compatible with CLIMAX's standard high-speed steel, brazed carbide, or indexable tool bits
- Tool height adjustments can be made without losing starting position

### TECHNICAL DATA


- Machines from 3.75 to 6 inches (95.3 to 152.4 mm) in diameter or 6 to 12 inches (152.4 to 304.8 mm) in diameter
- 0.30 inches (7.62 mm) of travel for small micro-adjust boring head, 1.5 inches (38.1 mm) of travel for large micro-adjust boring head
- Each 0.0025" (0.0635 mm) increment on the adjustment dial equals 0.005" (0.127 mm) diameter adjustment

- Fine adjustment can be made using a dial indicator (not supplied)

### COMPONENTS

Small Micro-Adjust Boring Head 3.75 to 6 inches (95.3 to 152.4 mm) P/N 69875 includes:	Large Micro-Adjust Boring Head 6 to 12 inches (152.4 to 304.8 mm) P/N 85376 includes:
1 - Micro-Adjust Boring Head for 2.25 inch (57.15 mm) bars	1 - Micro-Adjust Boring Head for 2.25 inch (57.15 mm) bars
4 - Tool bits	2 - Tool slides 6 to 9 inches (152.4 to 228.6 mm) 9 to 12 inches (228.6 to 304.8 mm)
3 - Allen wrenches, 6 mm, 3 mm, 1 mm	3 - Allen wrenches, 6 mm, 3 mm, 1 mm
1 - 1/4-inch Allen wrench with graduated dial	1 - 1/4-inch Allen wrench with graduated dial
1 - Storage/Carrying case with foam inserts. Case dimensions: 3 x 9 x 11 inches (76.2 X 228.6 X 279.4 mm)	1 - Storage/Carrying case with foam inserts. Case dimensions: 3 x 9 x 11 inches (76.2 X 228.6 X 279.4 mm)
Shipping weight: 6 Lbs. (2.72 Kg)	Shipping weight: 9 Lbs. (4 Kg)
Shipping Crate Dimensions: 3 X 12 X 12 inches (76.2 X 304.8 X 304.8 mm)	Shipping Crate Dimensions: 3 X 12 X 12 inches (76.2 X 304.8 X 304.8 mm)

# CLIMAX GLOBAL LOCATIONS

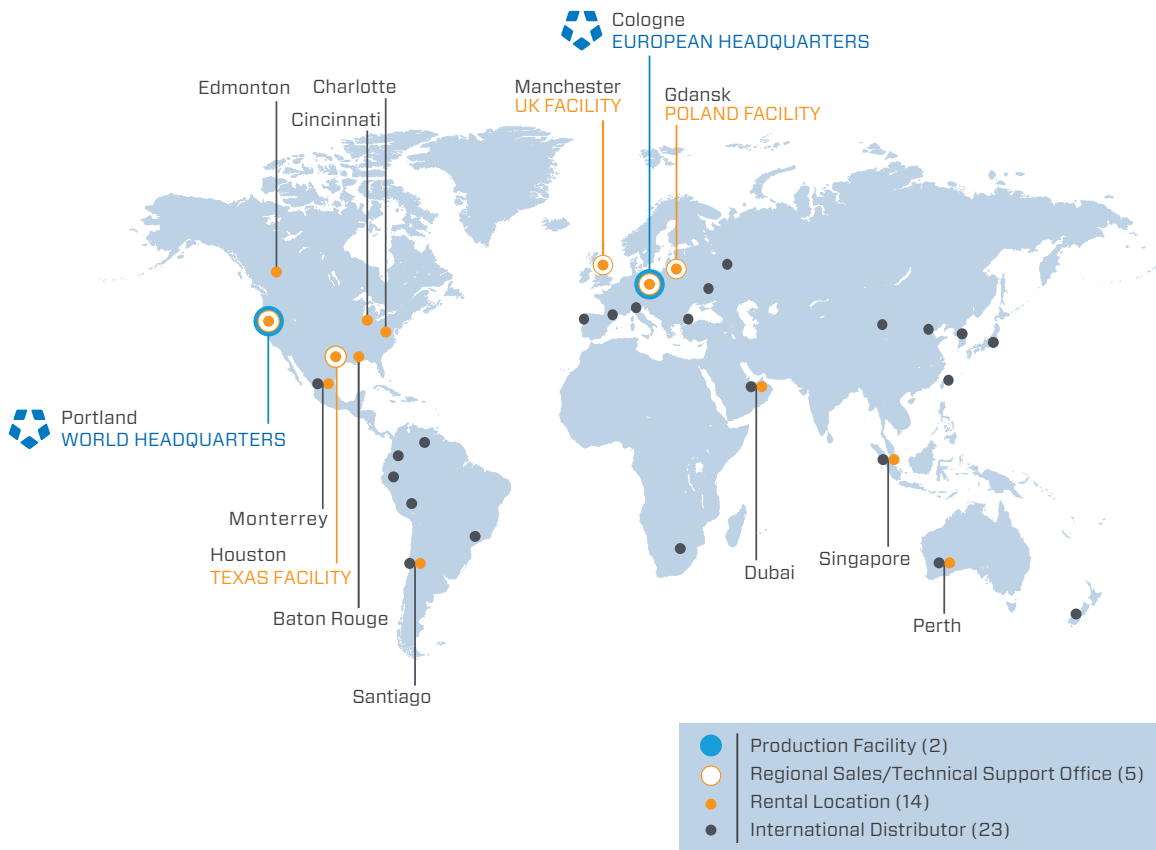

## Call CLIMAX for:

### On-site Training

Need some refresher courses in setting up and operating your CLIMAX machine tool?

### Custom Projects

CLIMAX has been solving complicated machining, welding and valve testing problems for our customers since 1964

### Rentals

With 14 worldwide rental depot locations, you are never far away from a CLIMAX tool.

Connect with us:  

### World Headquarters

2712 E. Second Street  
Newberg, Oregon 97132 USA  
Worldwide Telephone: 1.503.538.2185  
N. America Toll-Free: 1.800.333.8311  
Fax: 1.503.538.7600  
Email: [info@cpmt.com](mailto:info@cpmt.com)

### European Headquarters

Am Langen Graben 8  
52353 Düren, Germany  
Telephone: (+49) (0) 2421.9177.0  
Fax: (+49) (0) 2421.9177.29  
Email: [info@cpmt.de](mailto:info@cpmt.de)

Copyright © 2015 Climax Portable Machining & Welding Systems. All Rights Reserved. Climax has taken reasonable measures to ensure the accuracy of the information contained in this document. However, Climax makes no warranties or representations with respect to the information contained herein; and Climax shall not be held liable for damages resulting from any errors or omissions herein, or from the use of the information contained in this document.

 **CLIMAX**  
Portable Machining & Welding Systems